

INSTALLATION


INSTALL EPDM ON A DECK

What you will need:

- EPDM Membrane
- Water Based Adhesive
- Contact Adhesive
- Paint Roller
- Mini Paint Roller/Brush
- Broom


Guide:

Water Based Adhesive is intended for use on porous substrates only (wood or concrete) and roofs under 100m². Other surfaces and larger sizes should be adhered with Contact Adhesive on the whole deck. Contact Adhesive must be used for all upstands and detailing.

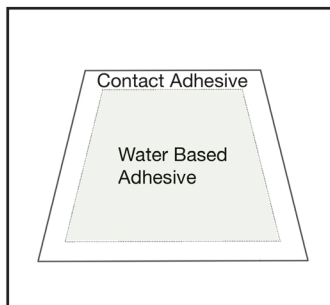


1. Brush down your substrate to remove any sharps.

Position the membrane onto your deck and allow to relax for at least 20 minutes so that it sits flat on the deck (times will vary depending on weather conditions).

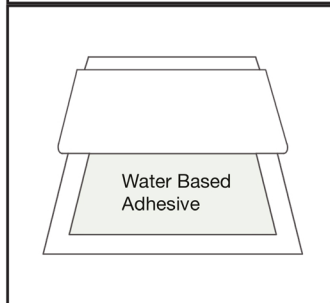

2. 20 minutes so that it sits flat on the deck (times will vary depending on weather conditions).
3. Fold back half of the membrane and roller Water Based Adhesive onto the substrate, leaving a 200mm perimeter all the way around. Roll the membrane onto the adhesive while it is still wet.


Fold back the other side of the membrane and repeat step 3.

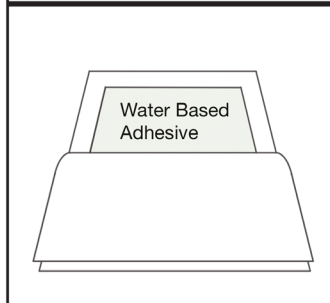

4. Both sides can be done in smaller stages if weather/membrane size are making the adhesive dry out.

5. Broom or brush over the membrane to smooth it out and remove air bubbles.

Fold back the edge of the membrane and roller Contact Adhesive onto the substrate and membrane. Allow the adhesive to tack off (touch dry) then roll the membrane back into place. Use a seam roller to smooth out the membrane and remove any air bubbles.

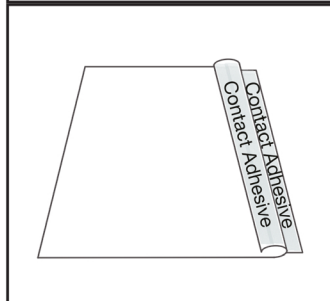

6. Repeat step 6 for each edge of the membrane.

8. If you have an upstand or other detail on any edge of the roof please refer to specific instructions for the detail.